



- 1. Remove**  
[FEM.2300]  
1/2" Female connector  
with install adjustment  
and o-rings

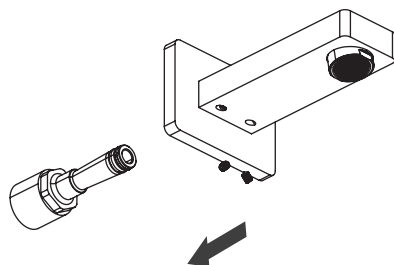


1/2 Male NPT Connector  
(inside wall)

- 3. Tighten**  
FEM.2300 into  
wall 1/2" Male  
Connector

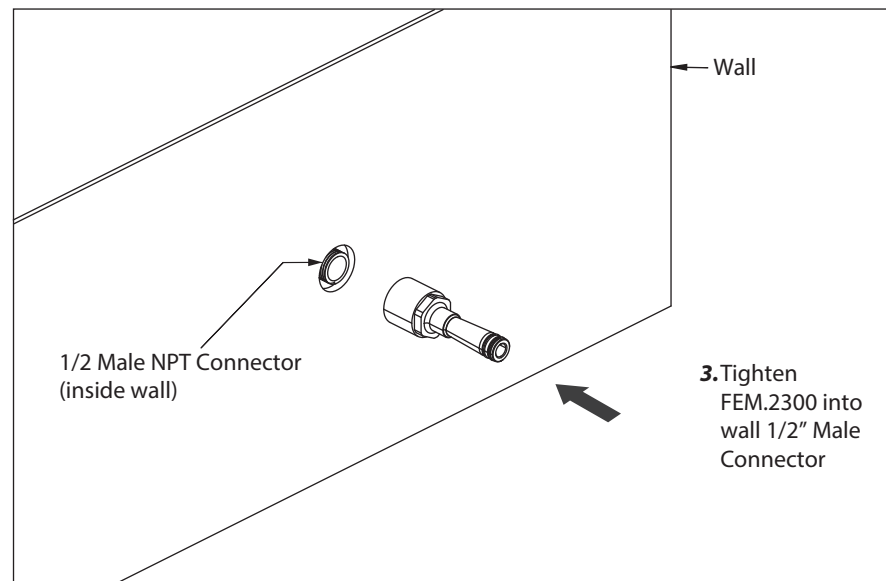

- 4. Once Spout Connector**  
[NPT 1/2"] is secured into  
the wall slide on trim  
and tighten hex screws.

Ensure O-rings are  
not damaged

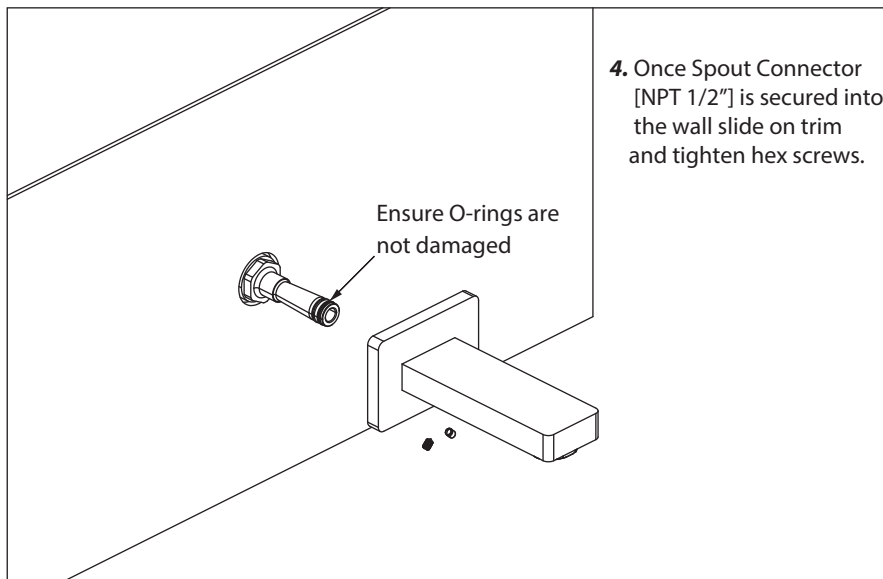

- 5. Tighten Hex screw**  
to secure trim onto  
Spout assembly / wall. -Use  
1.5mm Allen key

