# 260.1001- Bathroom Towel/Robe Hook
# Installation Manual

FLUSSO
LUXURY PLUMBING FIXTURES

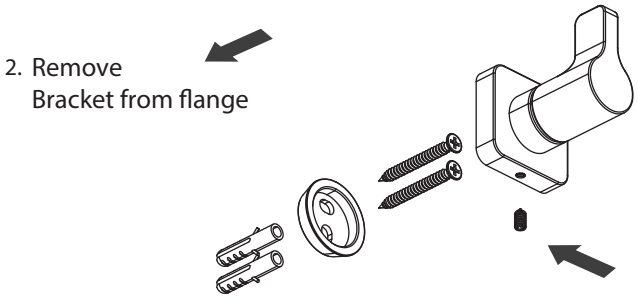

2. Remove
   Bracket from flange

1. Loosen Hex
   screw using
   1.5mm allen key

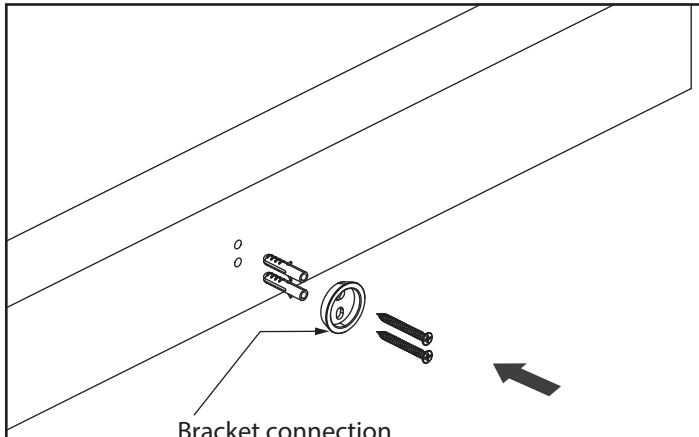

Bracket connection
(Inside wall)

3. Tighten screw into wall

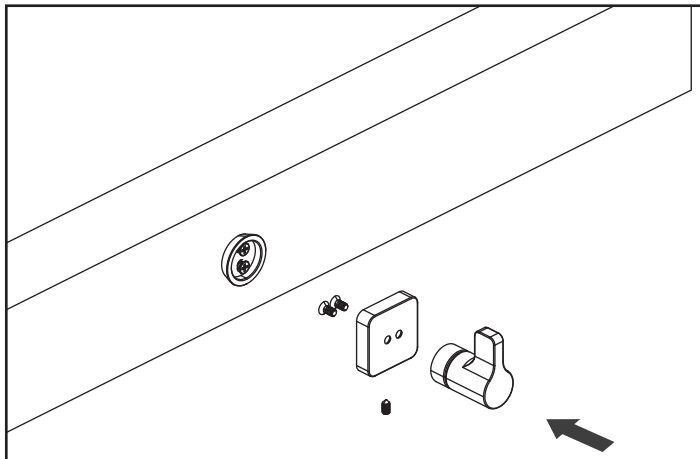

4. Once secured into the wall
   side on trim and tighten hex screw

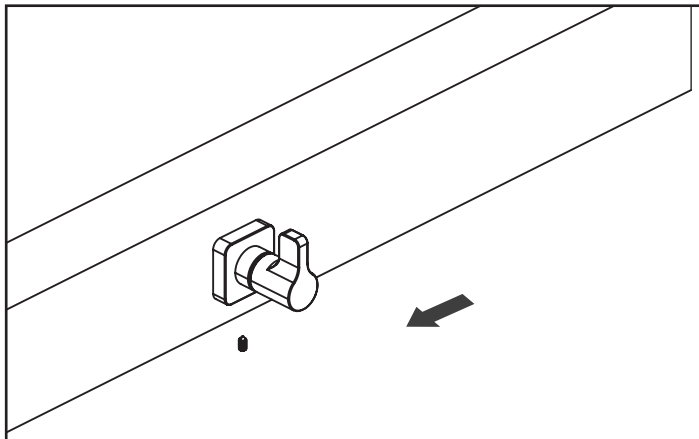

5. Tighten Hex screw to secure
   trim onto wall use 1.5mm
   allen key

Ver 2.53