


240.1950 Wall Mount Lavatory Faucet

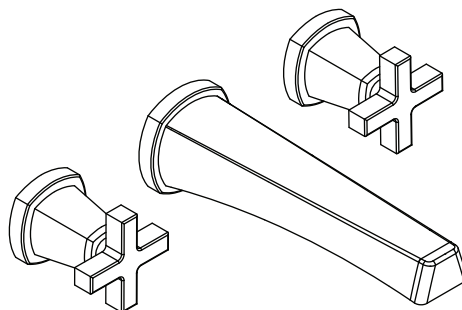

NOTICE TO HOMEOWNER

- We recommend that this product is installed by a qualified professional plumber.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and use.
- Please flush the water system to ensure that no metal swarf, solder, and other impurities can enter the product.
- Turn off water supply before commencing work.
- Please read these instructions carefully and retain for future reference.

BEFORE YOU BEGIN

- You must observe all local plumbing laws and codes.
- Do not install this valve if it does not meet local plumbing codes.
- Shut off the main water supply.

240.1950

Wall Mount Lavatory Faucet

TABLE OF CONTENTS

• Operating Specifications	.	.	.	.	.	.	.	1
• Valve Installation And Tolerance	.	.	.	.	.	.	.	2
• Connecting Supply Lines	.	.	.	.	.	.	.	3
• Installing The Product	.	.	.	.	.	.	.	4
• Installing Extension (Optional)	.	.	.	.	.	.	.	6

OPERATING SPECIFICATIONS

WATER TEMPERATURE



This product is to be used with water at a temperature range of 40°F - 120°F ONLY!

WATER PRESSURE



This product is to be used with a water pressure range of 15 PSI to 80 PSI ONLY

If water pressure is greater than 80 PSI install a pressure reducing valve (PRV)


This valve meets or exceeds ANSI A112.18.1 and ASSE 1016

VALVE INSTALLATION AND TOLERANCE

CUT-OUT DIMENSIONS


Isenberg's wall mount two handle lavatory valves does not come with a mud guard.

It is essential to review the cut-out dimensions shown on the left in dotted circular lines so that the proper hole sizes are cut-out in the finished tile.

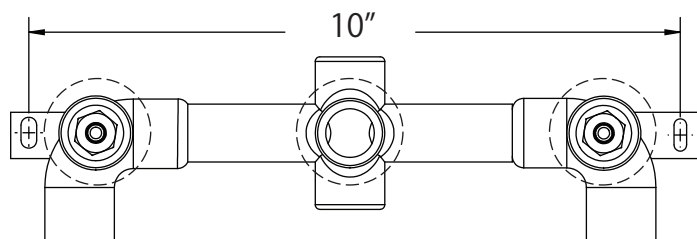


3x $\varnothing$ 1.3" [33mm]

VALVE INSTALLATION INTO THE WALL

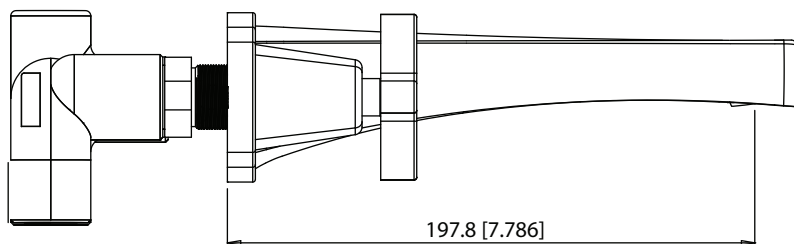

197.8 [7.786]

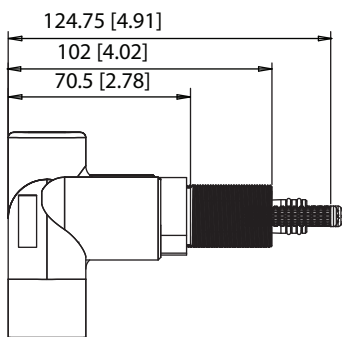


124.75 [4.91]

102 [4.02]

70.5 [2.78]

Install a crossbeam at the location where the valve will be installed. The distance between back of the valve to the finished tile surface should be between **xxx"** and **YYY"**.

Level and mount the valve to the crossbeam. Ensure valve is straight and do not install at an angle or upside down.

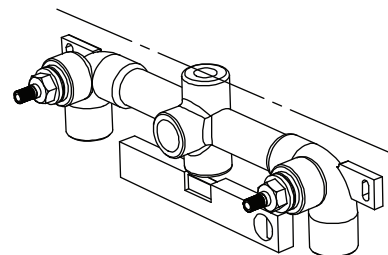

CONNECTING SUPPLY LINES

Connect valve to the hot and cold supplies using 1/2"-NPT copper supply lines. Do not apply heat directly to the valve as this may damage rubber and plastic seals and will void the warranty.

TESTING THE VALVE

Prior to completing the finished wall, fully test valve function to ensure that valve is working properly (see FLUSHING & PRESSURE TESTING section below).

Ensure that no leaks are present. Check cartridge function. To test valve function turn on the water to make sure both hot and cold supplies are working.


FLUSHING & PRESSURE TESTING

1. BEFORE INSTALLATION OF DRY WALL AND CLOSING OF WALL OPENINGS


The system must be flushed and pressure tested. Metal chips and sand commonly found in plumbing pipes can damage the components of the valve.

2. Ensure that both hot and cold supply lines are turned off. Ensure that the cartridge stem is in the off position. Remove the cartridge and slowly turn on the hot and cold supply lines. This will flush out the valve body and pipes.


INSTALLING THE PRODUCT

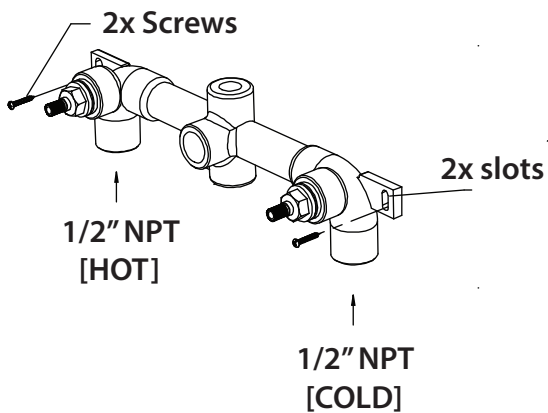


Level Valve and secure to back using slots.
Connect Hot and Cold Supply Lines.

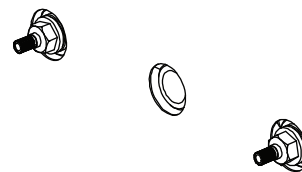

During tiling process follow cut out dimensions and cut appropriate holes in tile.

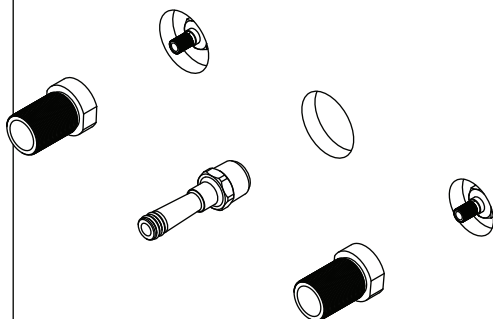


- 1) Tighten Cartridge Bezel on Hot/Cold Handles
- 2) Tighten spout connector w/ plumbers tape in the center

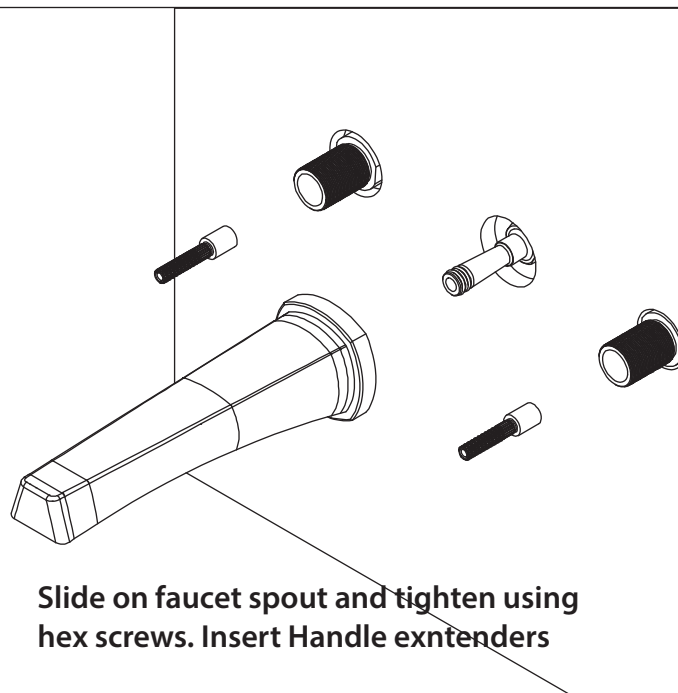

Slide on faucet spout and tighten using hex screws. Insert Handle extenders




INSTALLING THE PRODUCT

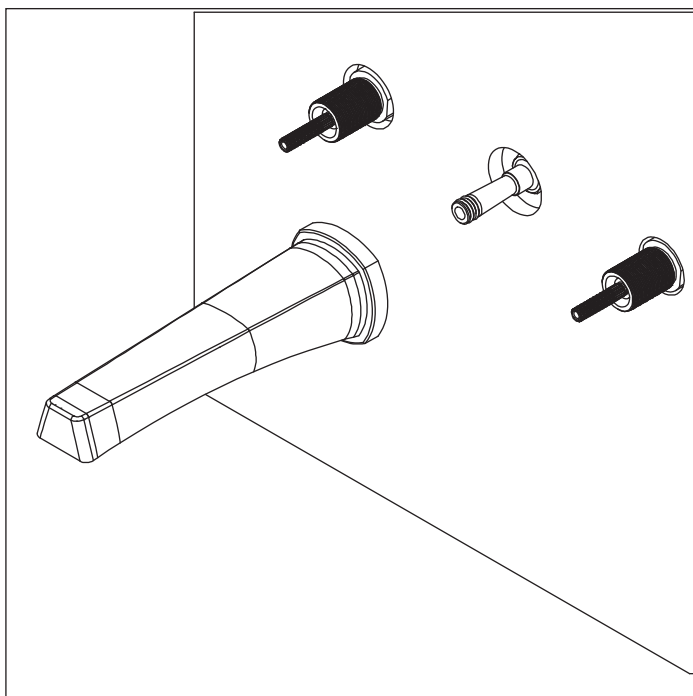


The Handle extender may need to be cut to size until the handle can touch the finished tile.

If the handle does not touch the finished tile - do not over tighten !

Cut extender instead.

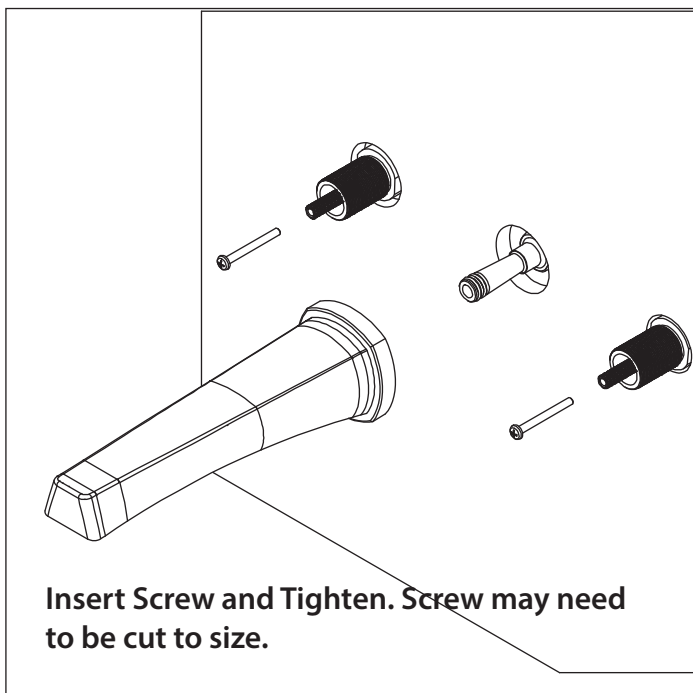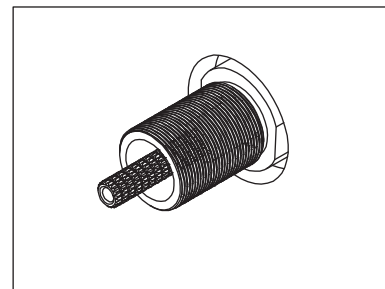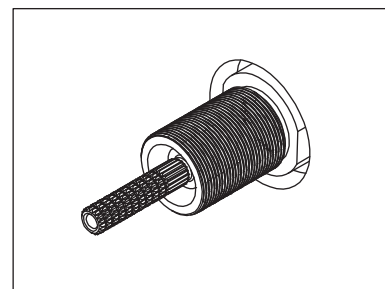

Insert Screw and Tighten. Screw may need to be cut to size.

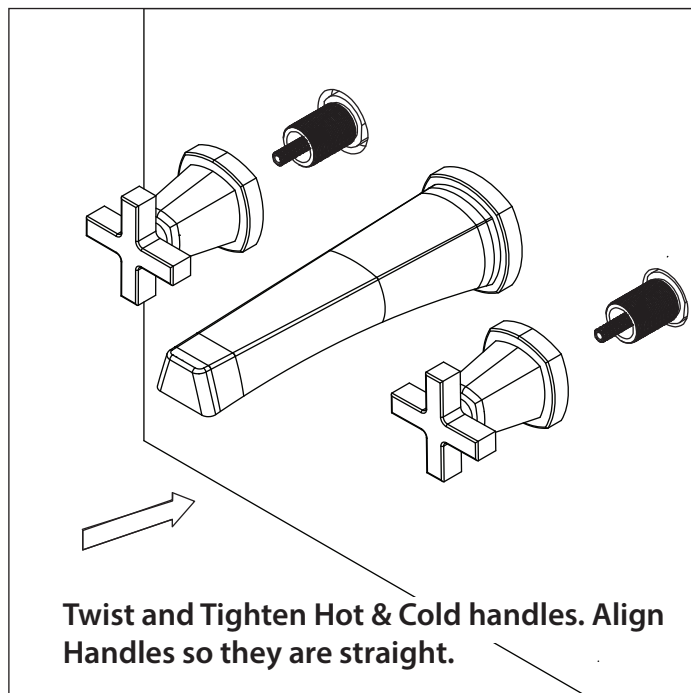

Twist and Tighten Hot & Cold handles. Align Handles so they are straight.

INSTALLING THE PRODUCT

